


Oil Quality Gateway (OQTg)

QUICK START GUIDE

What's in the box?

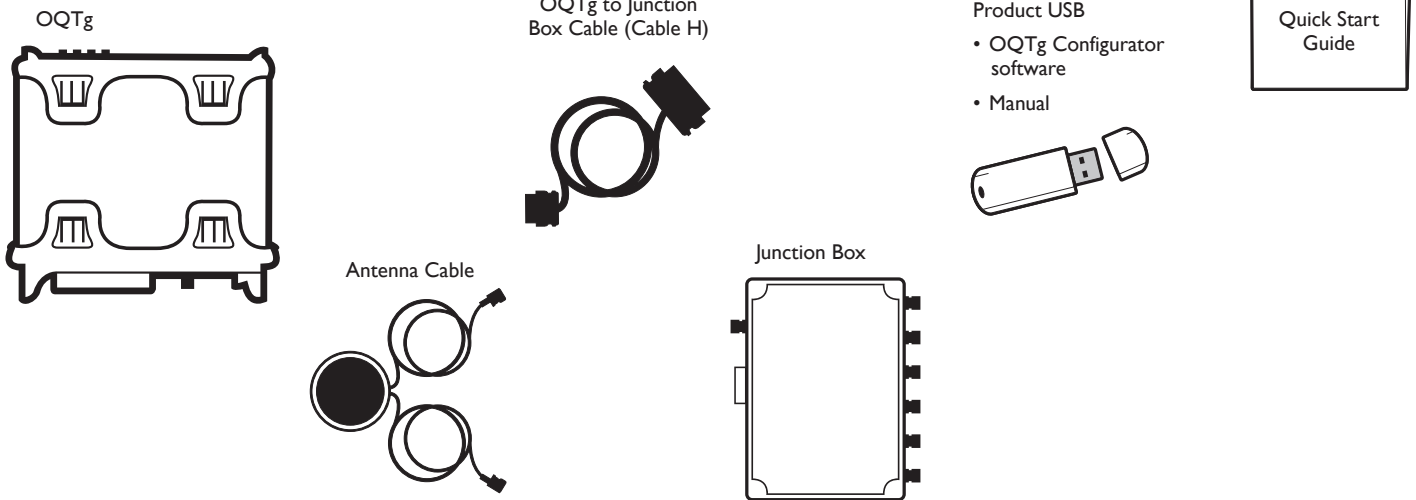


1. Configure




Configure USB on PC or Laptop using OQTg Configurator Software

Remove USB

Plug USB into OQTg

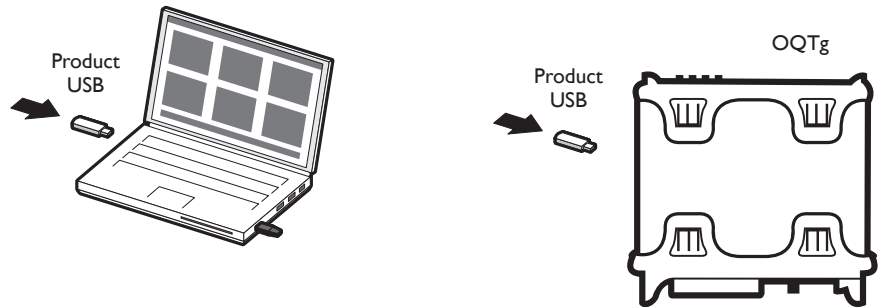

2. Install & Connect

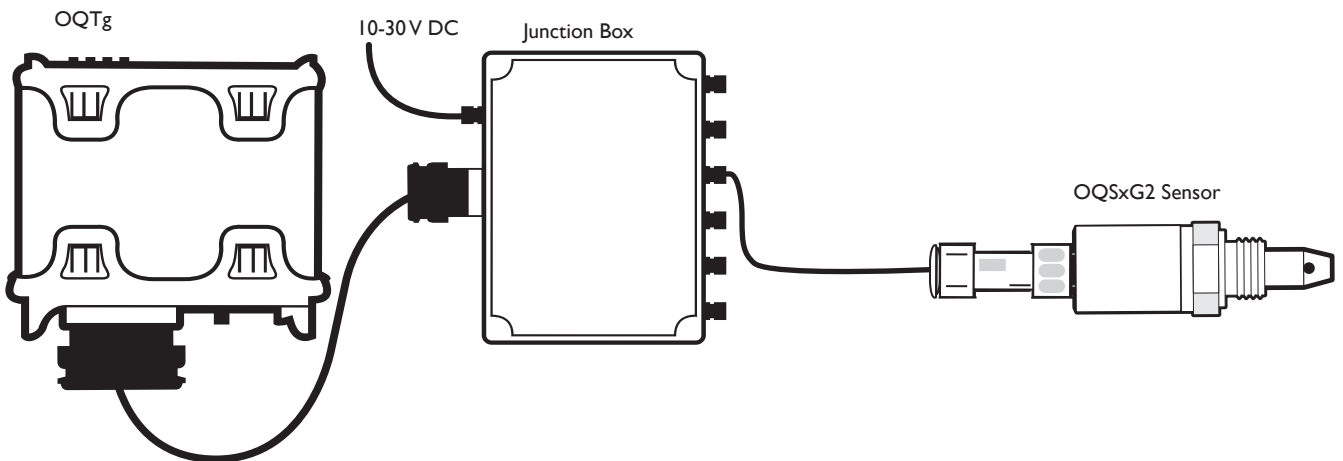

4. Activation steps

- Check installation
- Power On
- Wait for a few minutes until power LED solid green.....
- Check output.....

Troubleshooting

1. Check configuration (step 1)
2. Refer to manual
3. www.tandeltasystems.com
4. support@tandeltasystems.com

Tan Delta System Architecture

